

⚠ WARNING!

Make sure that your GLOCK Pistol is unloaded (magazine removed and chamber empty) before installing/removing the GLOCK Cover Plate or the GLOCK OR Plate.



Parts

GLOCK OR Plates Set

One set contains:

 
- 3 numbered GLOCK OR Plates for use of optical systems (see list of manufacturers).
- to choose correct plate see list of manufacturer
- to choose correct set see table of slide types and widths

OPTIC READY PLATES SET MARKINGS			
For GLOCK Pistols in OR configuration slide width 25,5 mm/1.00 in.			
			Thread
Adapter Trijicon, Holosun (except 509), Ameriglo	>>	02	6 – 32 UNC
Adapter C-More	>>	03	6 – 32 UNC
Adapter Leupold, Eotech	>>	04	M4

GLOCK Optic Ready (OR) Plates Set


⚠ WARNING!

Only fire the GLOCK OR Pistol Models with the GLOCK Cover Plate mounted or a GLOCK OR Plate and Optical Sight installed.

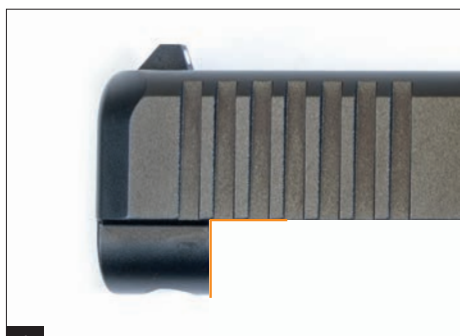

1

 Complete the Safety check and Field Strip steps as indicated in the GLOCK Instructions for Use. Place the slide of your pistol on a flat surface making sure that the recoil spring guide ring overlaps the surface.

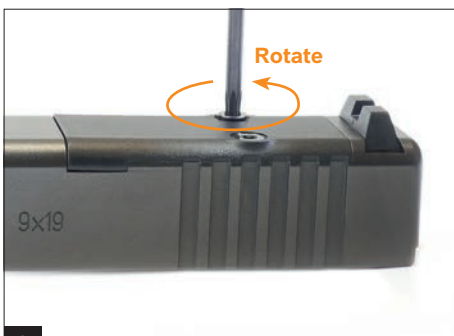


2

Remove the GLOCK Cover Plate.

⚠ WARNING!

 The removed screws should not be used for fixing the OR Plates.

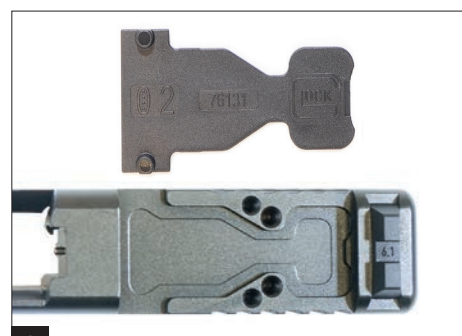

3

 
Place the selected Plate in the correct position and orientation.

Note: Markings on plate have to face upwards.



4

When the GLOCK OR Plate is completely seated on your GLOCK OR Pistol install the optical system according to the directions of the manufacturer.

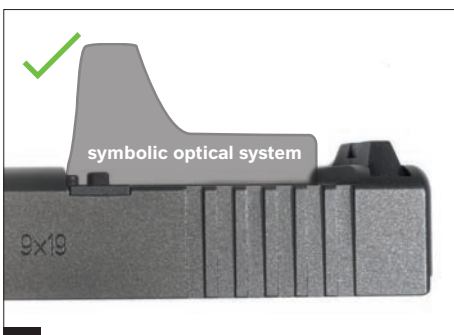

5

Only shoot your GLOCK OR Pistol with correctly installed GLOCK Cover Plate or GLOCK OR Plate and optical system.



Service and Cleaning

⚠ WARNING!

Make sure that your GLOCK Pistol is unloaded (magazine removed and chamber empty) before installing/removing the GLOCK Cover Plate or the GLOCK OR Plate.

Cleaning

Before cleaning your GLOCK OR Plate, remove it from the pistol. Only clean GLOCK OR Plates with a dry cloth.

For preventive gun maintenance see the GLOCK Instructions for Use included with the pistol.