

GLOCK Accompanying Sheet


MOS Adapter Plates (Modular Optic System)



www.glock.com

EN


Parts

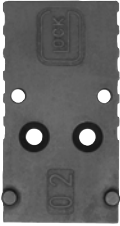

1. GLOCK MOS ADAPTER PLATES

One set contains:

- Numbered GLOCK MOS Adapter Plate (symbolic picture) for use of optical systems (see list of manufacturers).
- to choose correct plate see list of manufacturer (slide types and widths)



2. SCREWS

- 2 units 6 mm / 0,24 Inch (M3x6) Torx® screws to install the GLOCK MOS Adapter Plates. Screws come with drop of glue applied.
- 1 unit 6 mm / 0,24 Inch (M3x6) Torx® screw come as additional replacement screw

Make sure to use only these screws for fixing the adapter plates.

⚠ WARNING!

Make sure that your GLOCK pistol is unloaded (magazine removed and chamber empty) before installing/removing the GLOCK Cover Plate or the GLOCK MOS Adapter Plate.

Cleaning and Service

CLEANING

Before cleaning your GLOCK MOS Adapter Plate remove it from the pistol. Only clean GLOCK MOS Adapter Plates with a dry cloth.

LUBRICATION

Lubricate the GLOCK MOS Adapter Plate using a quality gun oil.

USE ONE SMALL DROP ON EACH SIDE AND SPREAD IT OVER THE ENTIRE SURFACE!



For preventive gun maintenance please check GLOCK Instructions for use.

SERVICE

Verify tightness of the screws depending on ammunition and frequency of use. If a torque wrench is available the optimum fit is 1.5 Nm / 13.1 inch lbs. If you often need to screw on and unscrew make sure to apply another drop of threadlocking type adhesive to the thread of the screws.

GLOCK MOS Adapter Plate Markings

For GLOCK Pistols in MOS configuration slide width 25,5 mm/1.00 in.

Adapter	Thread
Docter, Meopta, Insight, Vortex, Burris >> 01	M3
Trijicon, Holosun (except 509), Ameriglo >> 02	6 – 32 UNC
C-More >> 03	8 – 32 UNC
Leupold, Eotech >> 04	M4

For GLOCK Pistols in MOS configuration slide width 27,5 mm/1.06 in. and 28,5 mm/1.12 in. width.

Adapter	Thread
Docter, Meopta, Insight, Vortex, Burris >> 05	M3
Trijicon, Holosun (except 509), Ameriglo >> 06	6 – 32 UNC
C-More >> 07	8 – 32 UNC
Leupold, Eotech >> 08	M4

GLOCK MOS (Modular Optic System) Pistol Models


⚠ WARNING!

Only fire the GLOCK MOS Pistol Models with the GLOCK Cover Plate mounted or a GLOCK Adapter Plate and Optical Sight installed.



1

Complete the Safety check and Field Strip steps as indicated in the GLOCK Instructions for use. Place the slide of your pistol on a flat surface making sure that the recoil spring guide ring overlaps the surface.

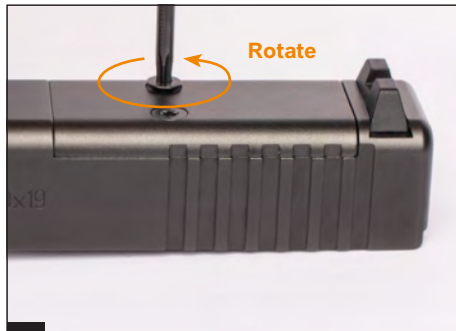


2

Remove the GLOCK Cover Plate.

⚠ WARNING!

The removed screws should not be used for fixing the Adapter Plates.

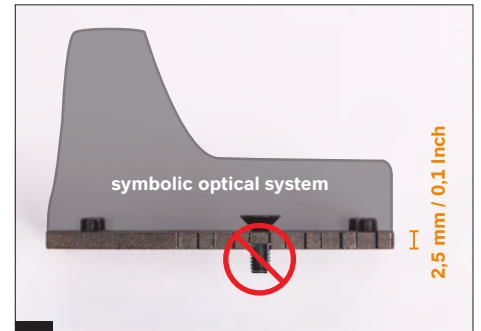

3


Select the appropriate GLOCK MOS Adapter Plate (see table and markings of the GLOCK MOS Adapter Plates). Before mounting on the slide, make sure the screw of the optical system does not protrude from the GLOCK MOS Adapter Plate (Width: 2,5 mm / 0,1 Inch).



4

Place the selected Adapter Plate in the correct position and orientation.

Note: Markings on plate have to face upwards.

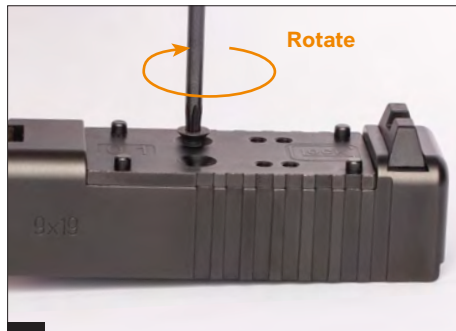


5

Tighten the 2 screws to fix the GLOCK MOS Adapter Plate on your GLOCK MOS Pistol. Screws should be tightened to a secure hold. (Attention: The set includes 1 additional replacement screw. It is not recommended to use these screws to fix the optical system itself.)



6

When the GLOCK MOS Adapter Plate is completely mounted on your GLOCK MOS Pistol install the optical system according to the directions of the manufacturer.

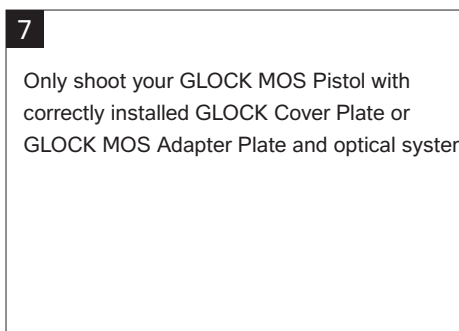

7

Only shoot your GLOCK MOS Pistol with correctly installed GLOCK Cover Plate or GLOCK MOS Adapter Plate and optical system.

